



IGNITION SYSTEM

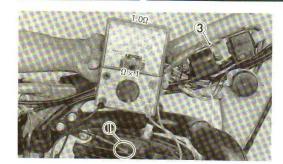

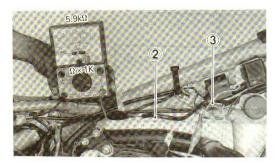

5 Ignition coil test


Use the pocket tester to check the resistance of primary and secondary windings of the ignition coil.




Primary Coil Resistance: $1.0\Omega \pm 15\%$

Secondary Coil Resistance: $5.9k\Omega \pm 15\%$

- ① Ground② Spark plug lead③ Ignition coil lead

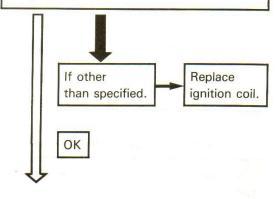

- Connectors check-up
- 1. Check the connectors and couplers for looseness of joining ends.
- 2. Keep the connectors and couplers from dirt or rust.

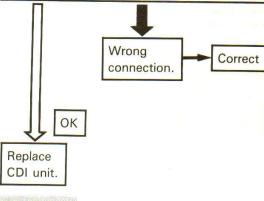

CAUTION:

Make sure the wire harness is in a position it will not make contact with exhaust pipe, which could short out CDI unit.